

KB(tm) TREMOLO INSTRUCTIONS

Licensed by Steinberger

Patent # 4,632,004

To Lock:

Engage small locking lever (just behind tuning knobs) by pushing lever forward. This will lock tremolo in center "fixed" bridge position and prevent any movement. (If no strings are on, this will require tilting tremolo up approximately into center position first, so that locking lever can engage.)

For most consistant results, always pull up on tremolo arm to set strings just before locking.

To unlock, push locking lever back.

To Change Strings:

First lock tremolo as described above before changing strings. Thread strings under tuning knobs and into headstock clamp. Tuning knobs can be removed for easy string installation. Tuning knobs should screw into bridge at least 4 turns.

To Tune:

Always lock tremolo before tuning individual strings. Tune up roughly to pitch and tighten headstock clamp. Make final tuning adjustments with tuning knobs on tremolo. Remember to pull tremolo arm up just before locking.

After strings are in tune, unlock tremolo. Now adjust spring lever (at back of tremolo) until tremolo return is exactly the same as the locked position, this way the unit will remain in tune in both locked or unlocked positions.

The spring lever adjustment works on a ratchet system. To engage, push lever in and rotate (clockwise to tighten, counterclockwise to loosen.) When lever rotation stops at the side of slot, simply pull lever back up to disengage, return lever to the other end of slot, push in to engage and rotate. Repeat until adjustment is complete.

Action:

First lock tremolo movement. Loosen set screw on side of bridge, adjust saddle set screws up and down to desired action height. Tighten set screws on side of bridge to lock.

Intonation:

First lock tremolo movement. Loosen set screw on side of bridge. Adjust saddle backward if intonation is high at 24th-fret. Push forward (toward head) if intonation at 24th fret is low. Tighten set screw on side of bridge to lock.

Tremolo arm:

To install arm, simply push all the way into hole. To remove arm, just pull it out again.

Adjust rotational friction of arm with the set screw on back of tremolo.

